
## SEAVIEW// ELEVATE YOUR ELECTRONICS

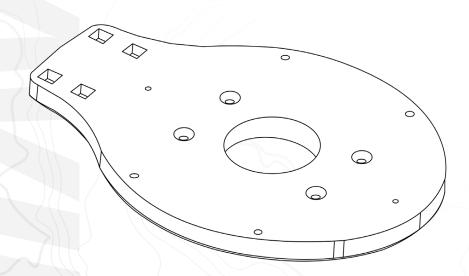

## INSTALLATION INSTRUCTIONS


For Seaview Modular Top Plate:

ADA-F3


Refer to website for most up to date instructions and videos.

WWW.SEAVIEWGLOBAL.COM


## **PARTS INCLUDED**

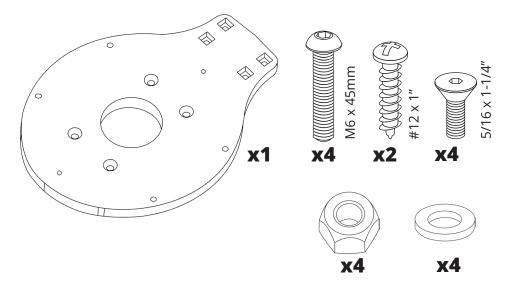


## **TOOLS NEEDED**

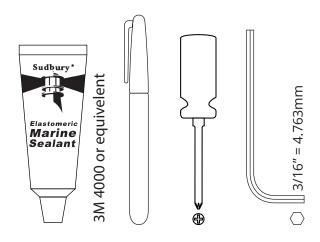

Insert rubber gasket on top of the Seaview mount. (Rubber gasket included with Seaview Mount.)

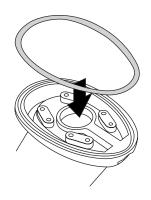



Place the ADA-F3 on top of the mount.

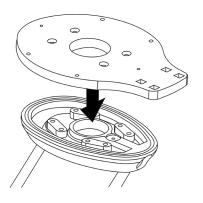


Secure the ADA-F3 with the four bolts using a 3/16" Allen Wrench.




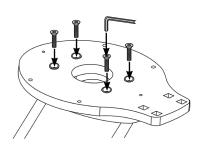







Secure the FLIR M300 Series to the adapter with the hardware specified by your electronics manufacturer.

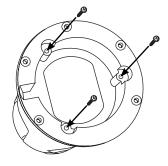


Place the FLIR camera on top of the ADA-F3 top plate. Make sure that the six holes on the adapter line up with the six holes on the top plate.

**Note:** you can set the home position (forward) of the FLIR camera after installation. The directional indicator on screen can be calibrated too. (refer to FLIR for questions about the FLIR set-up).

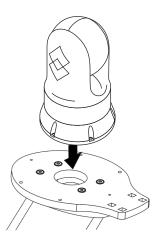

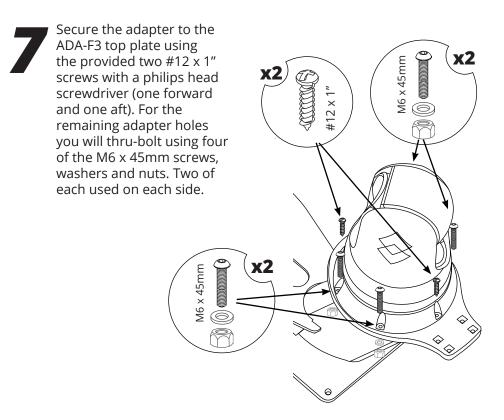

The four holes on the back of the ADA-F3 are for securing the optional Seaview Light Bar to the top plate.

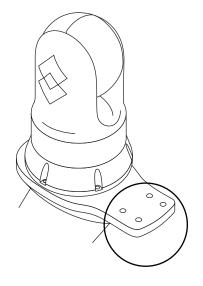



**SEAVIEW**//

Tel: 800-655-7922 www.seaviewglobal.com **EUROPEAN OFFICE** 

Tel: +33 4 94 53 27 70 www.seaviewprogress.com