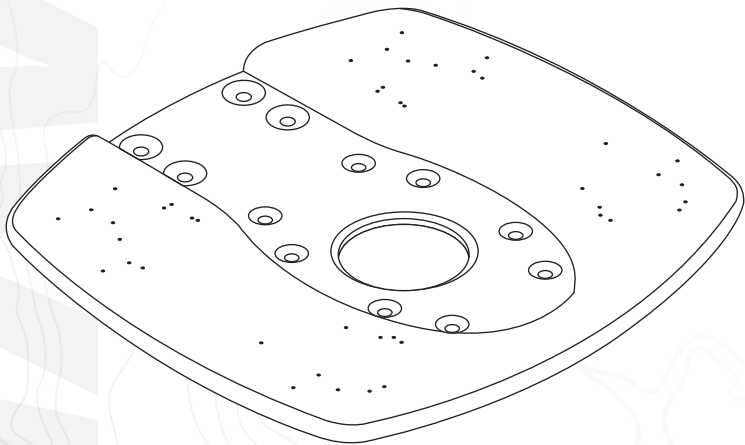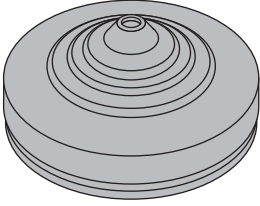# SEAVIEW///

ELEVATE YOUR ELECTRONICS

INSTALLATION INSTRUCTIONS

For Seaview Modular Top Plate:

ADA-R1

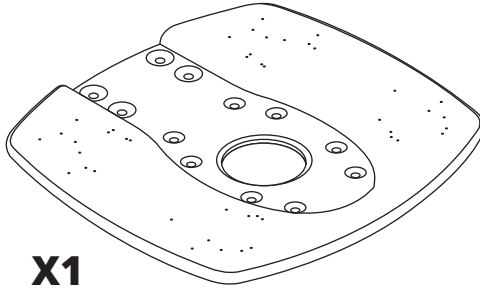Refer to website for most up to date instructions and videos.

WWW.SEAVIEWGLOBAL.COM

PARTS INCLUDED

X1

X1

X8

5/16-18 x 1"

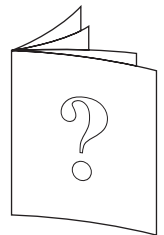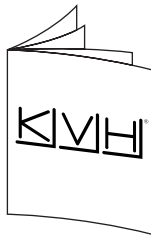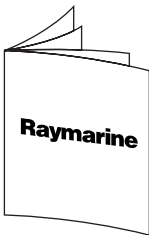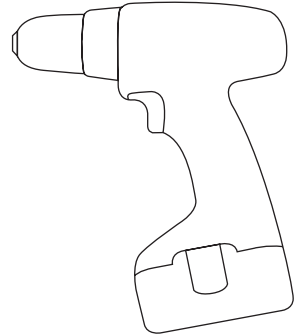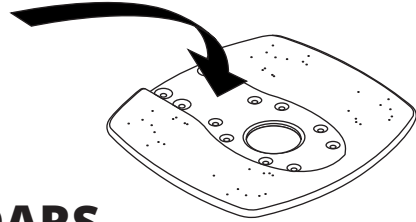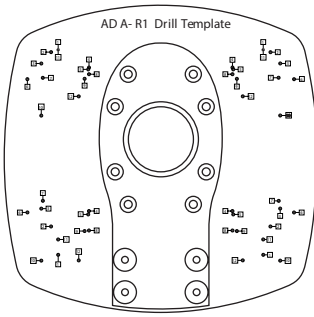//

TOOLS NEEDED

Sudbury Elastomeric Marine Sealant is recommended. To purchase call 800-655-7922 or visit www.seaviewglobal.com

Raymarine

KVH®

Intellian®

?

AD A- R1 Drill Template

CLOSED DOME RADARS

Hole #	Manufacturer	Model
11	B&G	BR24, 3G, 4G
12	Furuno	15" - 24" radar domes
11	Garmin	18" - 24" and Fantom radar domes
8	Geonav	24" radar domes
4	JRC	15" radar domes
4	Koden	18" (MDC 900 Series) radar domes RB714A
		15" (MDC 900 Series) radar domes TB715A
10	Koden	25" radar domes, 715A, MDC 900 Series
8	Lorenz	12" - 24" radar domes
5	Lowrance	LR1800HD
11	Lowrance	BR24, 3G, 4G
10	Nobeltec	15" - 25" radar domes
3	Raymarine	18" - 24" radar domes
11	Raymarine	Quantum and Quantum 2 radar domes
8	Seiwa / Techmarine	12" - 24" radar domes
5	Simrad	18" radar domes (DX64S)
11	Simrad	BR24, 3G, 4G, HALO24
5	Sitex	18" (TZ760 / T921) radar domes
10	Sitex	25" radar domes

OPEN ARRAY RADARS

| Hole #	Manufacturer	Model
2	**Furuno**	4' - 6' open array radars
2	**Garmin**	4' - 6' open array radars
7	**Geonav**	4' - 6' open array radars
9	**JRC**	4' - 6' open array radars
1	**Koden**	4' - 6' open array radars
9	**Lorenz**	4' - 6' open array radars
9	**Lowrance**	4' - 6' open array radars
1	**Nobeltec**	3.5' - 6' open array radars
7	**Northstar**	4' - 6' open array radars
6	**Raymarine**	4' - 6' open array radars *May need smaller OD washer*
7	**Seiwa / Techmarine**	4' - 6' open array radars
7	**Simrad**	4' - 6' (RB7 Series) open array radars
3	**Simrad**	4' - 6' HALO open array radars *Requires **#ADAHALO3** adapter plate. Drill #3 for adapter plate.*
7	**Sitex**	4' - 6' open array radars

1 Locate the Make and Model of your satellite dome on this chart and determine which drill hole number yours is. Then place the ADA-R1 Drill Template ontop of the ADA-R1 and mark the appropriate holes.
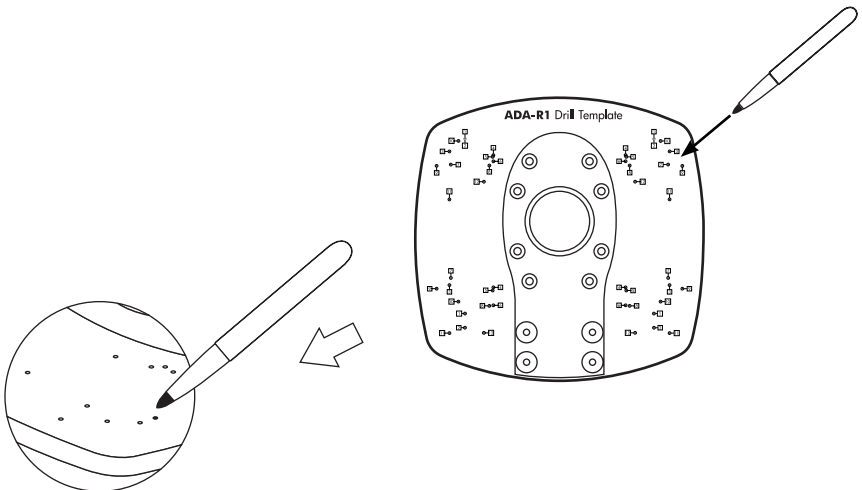
2 Drill the four marked holes. Be sure to check with your marine electronic manufacturers manual to determine what size drill bit is needed.
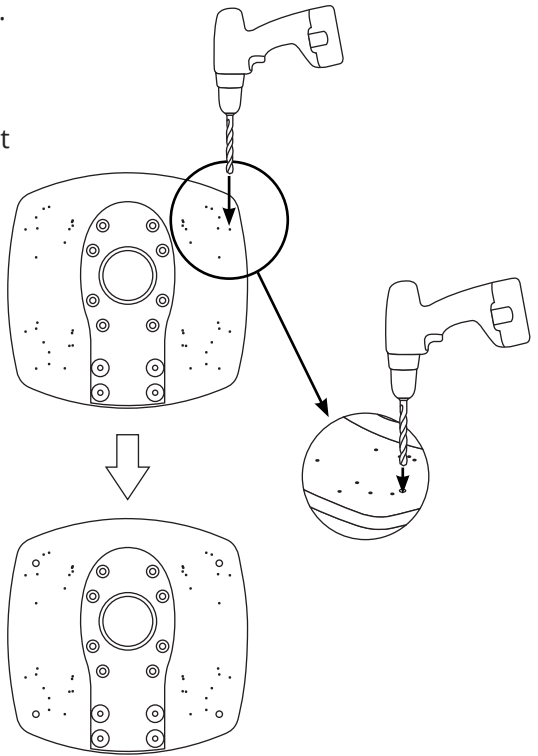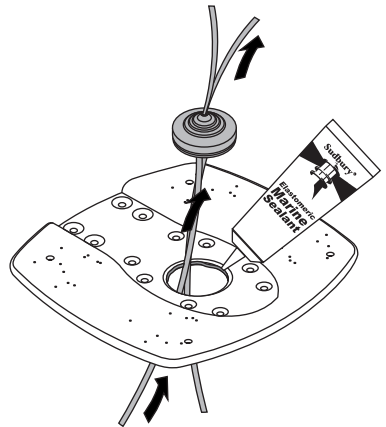
3 Apply marine adhesive sealant along the lip in the center hole on the ADA-R1. Route the cabling through the center hole in the ADA-R1. Then insert through the black rubber grommet.

TIP
Place the connector of the cable into a plastic bag. Apply Vasoline to the exterior of the plastic bag. Then try routing the connector/cable through the black rubber grommet.

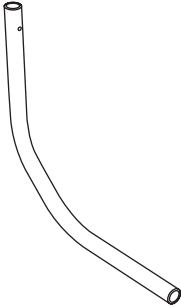**4** Be sure that the Top Plate edge sits in the rubber grommet.
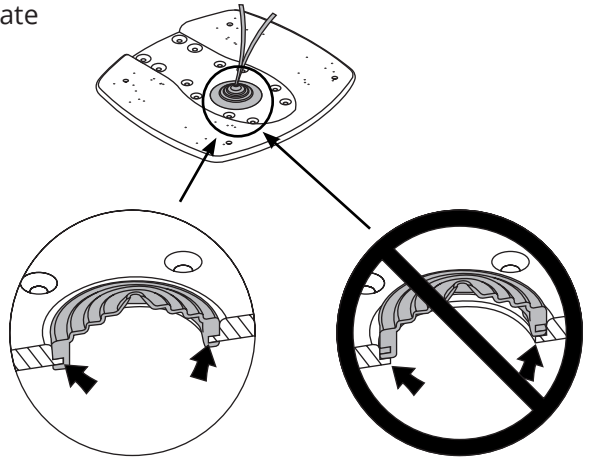
5 Make sure that the Top Plate is facing the forward when mounting
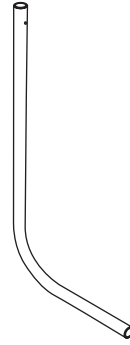
FWD
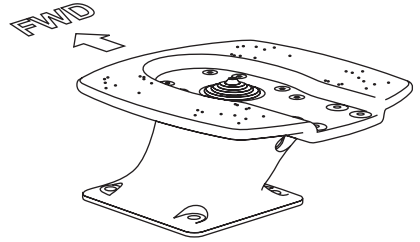
OPTIONAL ACCESSORIES

Call 800-655-7922 or visit www.seaviewglobal.com for available accessories.

## LIGHT BARS

LTB-R
Fits closed dome radars.
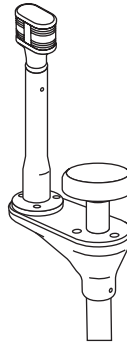
LTB-S
Fits 20" or smaller satdomes.
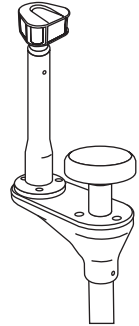
LIGHT BAR TOPS

LTBP-1197
Perko 1197 Light.

LTBA-7800
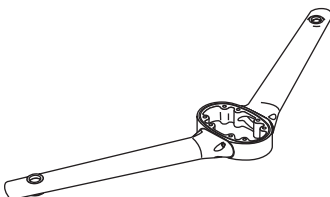Attwood LED Light.

LTBU1A1197
Light Bar Top with Perko 1197 Light, can fit GPS.

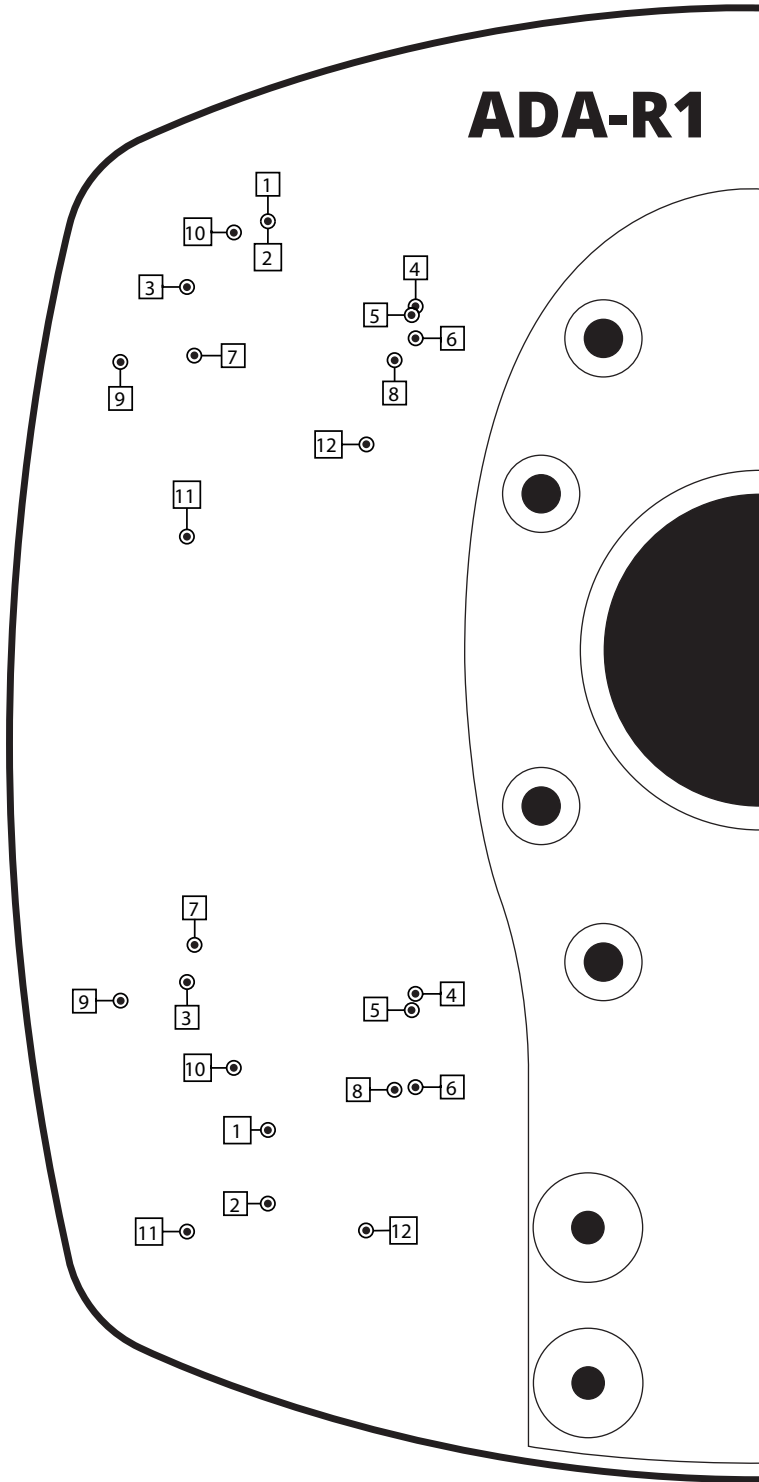**LTBU1A800**
Light Bar Top with Attwood LED Light, can fit GPS.

SPREADER KIT

SP1-MOD
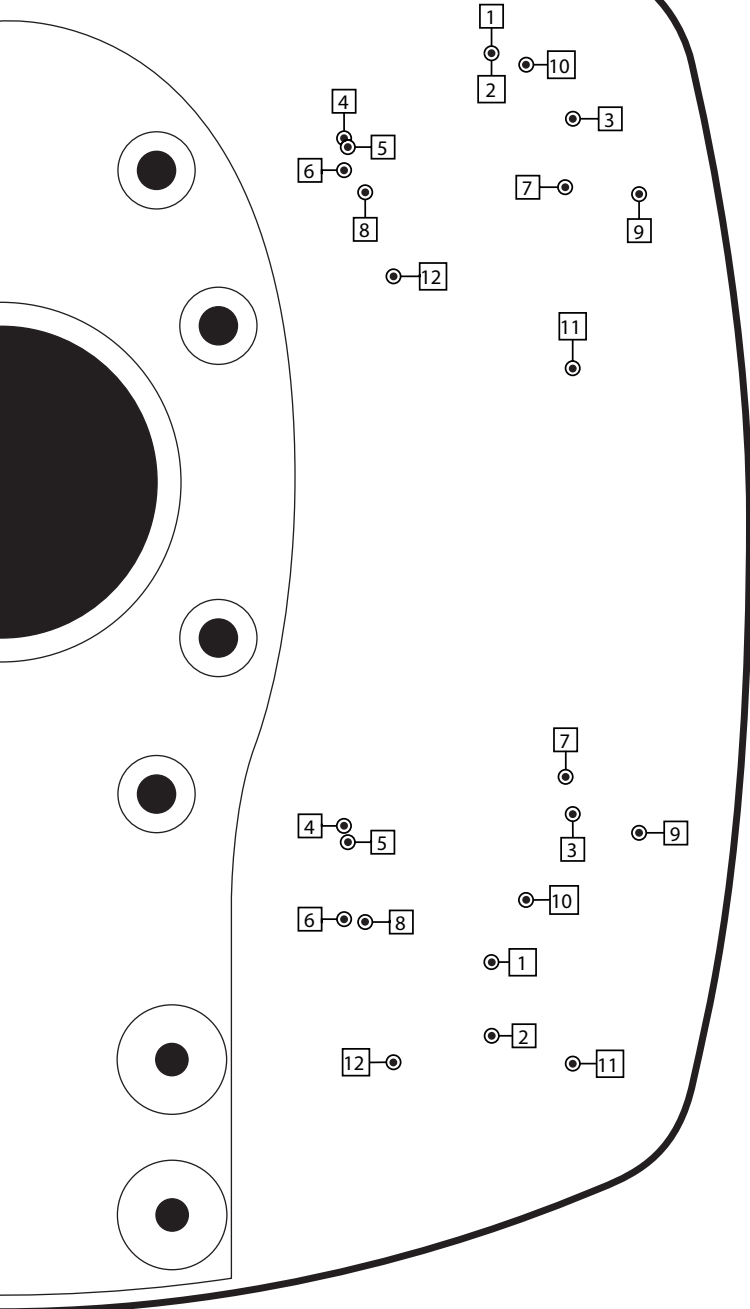Allows user to mount GPS units or antennas onto a Seaview Modular Mount.

6

ADA-R1

Drill Template

1
2
10
4
5
6
8
3
7
9
12
11

7
4
5
3
9
6
8
10
1
12
2
11

This page is intentionally left blank.

This page is intentionally left blank.

SEAVIEW///
ELEVATE YOUR ELECTRONICS

SEAVIEW///
Tel: 800-655-7922
www.seaviewglobal.com

EUROPEAN OFFICE

Tel: +33 4 94 53 27 70
www.seaviewprogress.com

5-100418